


## ▶ CT-200 OPERATING INSTRUCTIONS - Wire Gauge Adjustment

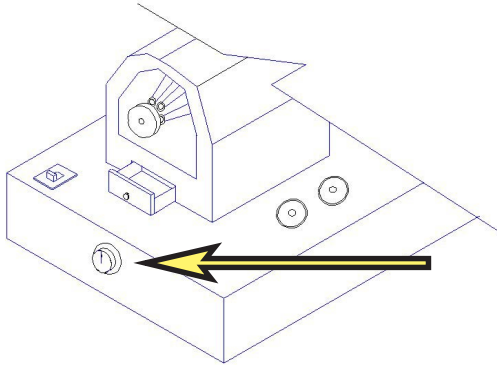

### Wire gauge Adjustment:


Turn Adjustment Rod (to close blades) **Counter Clockwise** for smaller diameter wire.

Turn out Adjustment Rod (to open blades) **Clockwise** for larger Diameter wire.

For find tuning adjust blade depth using adjustment rod to prevent nicks and produce quality strips.

**OPERATION:** Engage foot pedal to activate and embed blades, pull wire out of wire guide while foot pedal is pressed to remove slug, release foot pedal to remove wire, slug will drop into tray.

**Maintenance:** Lubrication not required, use low pressure air or brush to clean debris from cutter module.

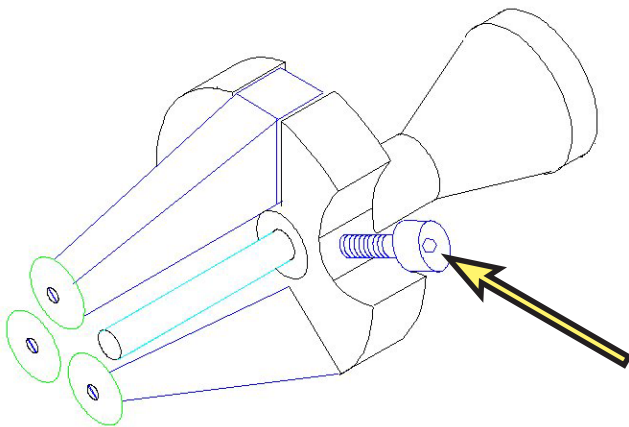

### Center Conductor Stop Adjustment

#### Center Conductor Stop:

Adjustment Screw (Blue) for setting length of Wire Conductor Strip

**Cutter Head Module - Rotary Blades:** Red screw opposite side (not shown) loosen to remove Cutter Module

**MADE IN U.S.A.**



**Coastel Cable Tools International Corp.**

1211 South Salina Street  
Syracuse, New York 13202 USA  
1-315-471-5361 FAX 1-315-472-1765



**1-800-451-7615**

***www.CoastelTools.com***